



Schletter Ludwig

FOR CONCRETE ROOF TILES UNIVERSAL REPLACEMENT PLATE FOR ALL COMMON ROOF TILES

- Mechanical cutting unnecessaryNo more broken tiles
- » Flexible positioning on the roof
- » Long-lasting stability => Tread resistance
- Wind calmed zones are created in the corrugated depressions
 Water flows straight down
- » Raised panel sides=> Maximum water sealing
- » With rodent protection
- » With proven butyl adhesive strip
- » Optimized warehousing
- » Can be combined with the SL Alu roof hook series
- » Material: Rolled aluminum sheet metal
- » Cover length: 430 mm











^{*}Our warranty conditions apply.
They are available at <u>www.sl-rack.com</u>



Dimensions

| | а | b | С | d | е | f |
|------------|---------|---------|---------|---------|---------|---------|
| Beta-Plate | approx. | approx. | approx. | approx. | approx. | approx. |
| | 457 mm | 193 mm | 586 mm | 520 mm | 52 mm | 32 mm |

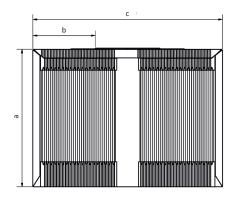





For a perfect connection to the roof, check for suitability before installation!

- » Minimum roof pitch 10°, as per ZVDH; ZVDH specifications regarding the sub-roof must be observed.
- To ensure water sealing, the roof tiles need to be dry and free from dirt during installation.
- The tile should not be longer than the Beta-Plate (check dimension a).
- » Tiles with interlocking pyramids on the bottom and extreme bead differences/waviness are not compatible
- » Avoid the formation of water pockets, which would hinder proper water drainage
- » Attachment lugs of overlying roof tiles may need to be removed.
- » Beta-Plates must not be installed **directly** on top of each other.
- The Beta-Plate is not a substitute for a verge tile; it must be moved inwards by one tile, possibly with the help of the rafter spanning profile.
- » Special approval upon request
- » For questions about tiles, contact <u>sales@sl-rack.com</u>



Accessories

» Roof hook 3D SL Alu

- Three-dimensional adjustability
- Suitable for all common tile roofs / snow load zones
- Optimal adaptability to the roof: no shims necessary
 - Vertical adjustability of the foot
 - => Attaching the roof hook at the optimum height
 - Horizontal flexibility of the base plate
 - => Optimal positioning of the bracket when exiting the tiles
 - Vertical flexibility of the pre-installed Clamp Combination
 Optimal height positioning of the rail
- Only one tool required: Torx 40
- Fast hook-in technology for rails
- Flexible installation: Single- or cross-railed systems



VARIANTS

| Item no. 11145-01 | FAN 4262355112555 | Roof Hook 3D St. Alu K | 10 per per DII |
|----------------------|-------------------|-------------------------|----------------|
| itelli ilo. 11145-01 | EAN 4202333112333 | NOOL HOOK 3D 3L AIU K | 10 pcs. per PU |
| Item no. 11100-01 | EAN 4262355112562 | Roof Hook 3D SL Alu L | 10 pcs. per PU |
| Item no. 11100-02 | FAN 4262355112609 | Roof Hook 3D St. Alu XI | 10 pcs. per PU |

» Roof hook SL A2

- Economical and reliable all-rounder
- Suitable for all common tile roofs / snow load zones
- Shims 2 or 5 mm
 - => Optimal adaptability to the roof
- Only one tool required: Torx 40
- Fast hook-in technology for rail attachment
 - Pre-installed Clamp CombinationHeight adjustability of the rail
- Flexible installation: Single- or cross-railed systems



VARIANTS

| Item no. 13135-01 | EAN 4262355110926 | Roof Hook SL A2-35 | 20 pcs. per PU |
|-------------------|-------------------|-----------------------------|----------------|
| Item no. 13145-01 | EAN 4262355110933 | Roof Hook SL A2-45 | 20 pcs. per PU |
| Item no. 13145-02 | EAN 4262355110940 | Roof Hook SL A2-45 X | 10 pcs. per PU |
| Item no. 13145-03 | EAN 4262355112036 | Roof Hook SL A2-45 L (long) | 10 pcs. per PU |
| Item no. 13155-01 | EAN 4262355111923 | Roof Hook SL A2-55 | 10 pcs. per PU |



Schletter Ludwig

Installation



Remove the tiles in the installation area (max. 3 tiles). Position the remaining



...under the top row, so that the cross battening is easily visible and accessible.



Make sure the installation area is clean, dust-free and dry!



Determine the height of the tile (HT) to be compensated for.



Adjust the height of the Beta-Plate by folding the support plate on the back.



Height of tile (HT) = height of support plate (HS).



Position the opening of the support plate on the upper batten.



Press down on the bottom edge to roughly form-fit the Beta-Plate to the tiles.



Completely peel off the cover of the adhesive tape from the back of the Beta-Plate.



Starting from the center and working outwards, press down the Beta-Plate firmly and ensure it is form-fitting the tile below.



Installation



Make sure no water pockets can form in the upper and center part.



Remove the tiles above the Beta-Plate.



Make sure the installation area is clean, dust-free and dry!



Align the base plate of the roof hook on the rafter.



Fasten the base plate to the rafter with a minimum of 2 wood screws (at least 1 screw per horizontal row of holes) with a tightening torque of 10 Nm.



Peel off the cover of the adhesive tape from the back of the foam wedge.



Attach the foam wedge to the rear edge of the Beta-Plate.



Cut the foam wedge at the position of the roof hook with an L-cut.



Insert the roof hook into the base plate.



Place the cut of the foam wedge around the roof hook.



Installation



Fixate the positon of the roof hook by tightening the bolt (6 Nm).



Put surrounding tiles...



Make sure the installation area is clean, dust-free and dry!







...back in place.



Done!



| <u>Notes</u> | |
|--------------|--|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |





Technical Data

Material Rolled sheet aluminium, rubber collar in EPDM and galvanised steel (support plate)

Design Tool SL-Rack-Configurator **Solar.Pro.Tool.**

Statik The statics calculation takes place as per the current country-specific standards (EN 1991, EC1 for Germany).

Depending on snow or wind loads or for large modules, it may be necessary to use more than the standard 4 attachment points. Please make sure to comply with the instructions of the module manufacturer contained in the

installation manual. We do not assess the load-bearing capacity of the roof.



is important to us!

We want to make your everyday work easier. Your praise, criticism and suggestions for improvement help us to do this. We look forward to your feedback.



SL Rack **Feedback**Provide Feedback >



SL Rack **Website**Check it out >



SL Rack **YouTube**Watch videos >

Find us on









Subject to technical changes and misprints.
Version 07/2024 V5